

 
VIBROCK Manual

Thanks for purchasing our products, before operating this product, please read the enclosed operating instructions.

Product introduction

The Chorus-Tremolo Monoblock Pedal can create fantastic sounds for electric guitar, showing more richness for the prolonged sound, and it must be mentioned that its sounds belongs to Modulation, getting much more wild when play with Fuzz Effect. Even if you add a Delay Effect, the sounds would be also very psychedelic, directly becoming the JIMI status. In a word, the Psychedelic Rock perfectly interprets the symbolic Chorus/Tremolo Effects of the late 1960s.

Operating Instructions

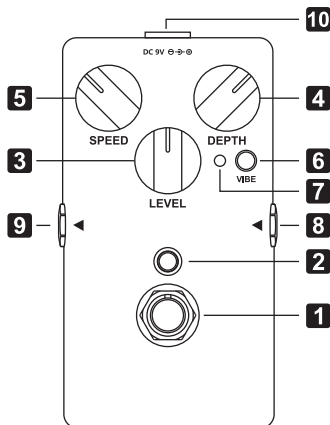

- 1. Footswitch**
Push down the footswitch to switch between effects and bypass status
- 2. ON/OFF LED**
Displays the on/off status.
- 3. LEVEL Knob**
Volume Adjustment Knob
- 4. DEPTH Knob**
Depth Adjustment Knob
- 5. SPEED Knob**
Speed Adjustment Knob
- 6. VIBE Button**
String-kneading Effects
- 7. VIBE ON/OFF LED**
- 8. Input Jack**
1/4" mono audio jack, inputs the signal
- 9. Output Jack**
1/4" mono audio jack, outputs the signal
- 10. DC IN Power Jack**
DC 9V regulated AC adapter (Plug polarity is Positive on the barrel and negative in the center)

Use 9V Battery

The effector can be connected to DC 9V battery and used as follows (This device is shipped without battery) :

1. Open the rear cover, as shown in Figure 1.
2. Buckle the 9V battery onto the buckle and load it into the product, as shown in Figure 2.
3. Close the back cover and lock the screws.

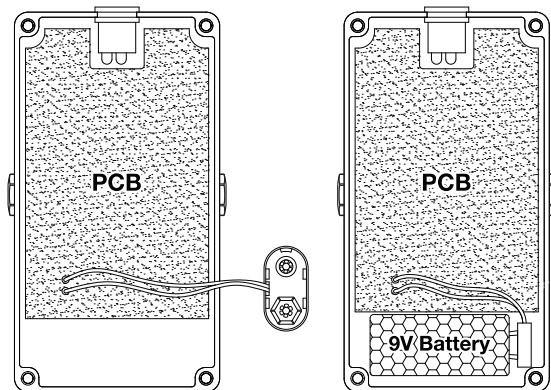 


Figure 1

Figure 2

Specifications

- ◆ Input Impedance: 500K Ohms
- ◆ Output Impedance: 1k Ohms
- ◆ Working Current: 6mA
- ◆ Power Supply: DC 9V battery / adapter (⊕⚡⊖)
- ◆ Dimensions: 114(D)*65(W)*52(H)mm
- ◆ Weight: 253g (With box)

Precautions

- ◆ Do not disassemble, modify or repair the device without authorization to avoid short circuit.
- ◆ Do not use the device in places with high temperature, humidity, dirt and strong vibration.
- ◆ Do not drop the device or let it fall on a hard surface to prevent the device from operating abnormally.
- ◆ Do not scrub the surface of the device with dilute liquids such as alcohol to avoid damage to the device.
- ◆ Please remove the battery when the device is not used for a long time.
- ◆ Do not dispose the discarded batteries as general waste.